
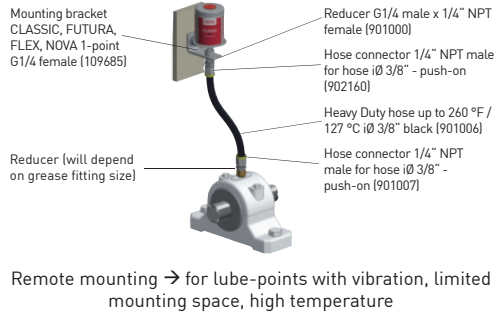


perma CLASSIC - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication

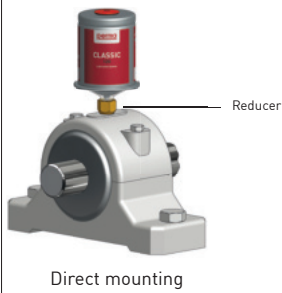

Select a suitable lubricant for perma CLASSIC






Select activator screw

→ e. g. with perma SELECT APP






(refer to our product catalog for details)


2. Prepare lube-point

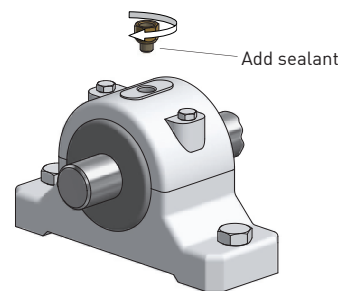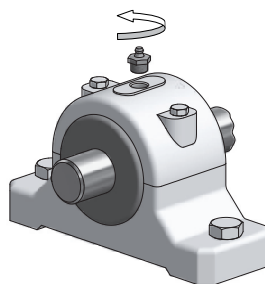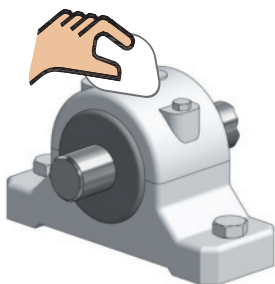

Add reducer and tubes (if required)

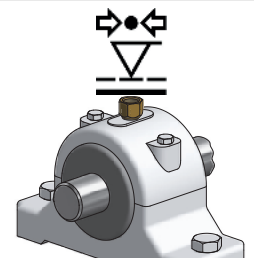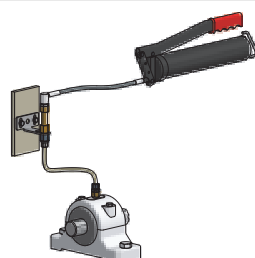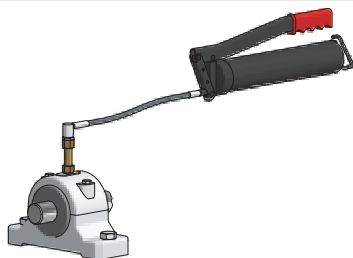

3. Activation / Installation of lubrication system

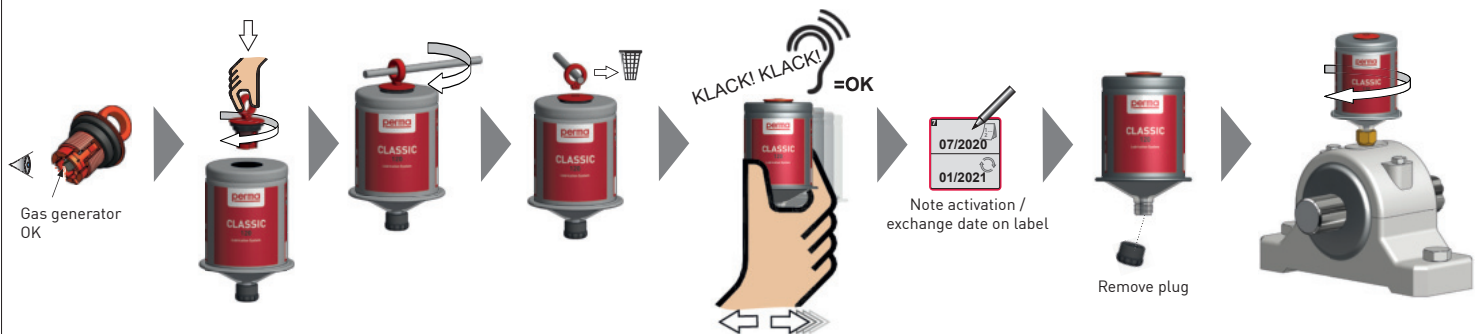

perma FUTURA - Quick Start Guide


1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication



Direct mounting

Mounting bracket CLASSIC, FUTURA, FLEX, NOVA 1-point G1/4 female (109685)

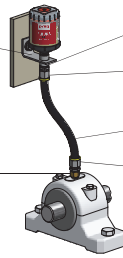

Reducer (will depend on grease fitting size)

Reducer G1/4 male x 1/4" NPT female (901000)

Hose connector 1/4" NPT male for hose iØ 3/8" - push-on (902160)

Heavy Duty hose up to 260 °F / 127 °C iØ 3/8" black (901006)

Hose connector 1/4" NPT male for hose iØ 3/8" - push-on (901007)

Remote mounting → for lube-points with vibration, limited mounting space, high temperature



Select a suitable lubricant for perma FUTURA




Select activator screw

→ e. g. with perma SELECT APP




(refer to our product catalog for details)


2. Prepare lube-point

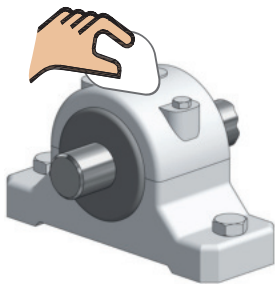


Clean lube-point

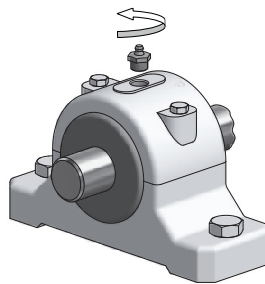


Remove grease fitting

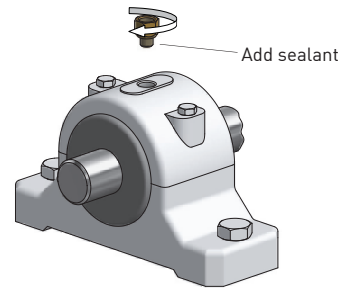


Add reducer and tubes (if required)

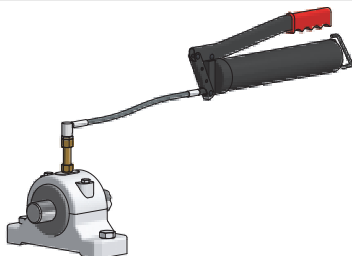

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

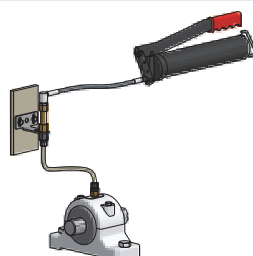

For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

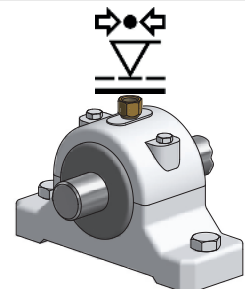

Pressure check: Lube-point / all connecting parts
(refer to perma FUTURA installation guide for details)

3. Activation / Installation of lubrication system

