

perma FLEX - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Direct mounting

Examples: Bearing lubrication

Mounting bracket CLASSIC, FUTURA, FLEX, NOVA 1-point G1/4 female (109685)

Support flange FLEX

Reducer

Reducer (will depend on grease fitting size)

Reducer G1/4 male x 1/4" NPT female (901000)

Hose connector 1/4" NPT male for hose iØ 3/8" - push-on (901007)

Heavy Duty hose up to 260 °F / 127 °C iØ 3/8" black (901006)

Hose connector 1/4" NPT male for hose iØ 3/8" - push-on (901007)

Remote mounting → for lube-points with vibration, limited mounting space, high temperature

360°

Select a suitable lubricant for perma FLEX

Select discharge period
→ e. g. with perma SELECT APP

(refer to our product catalog for details)

2. Prepare lube-point

Clean lube-point

Remove grease fitting

Add sealant

Add reducer and tubes (if required)

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

Pressure check: Lube-point / all connecting parts
(refer to perma FLEX installation guide for details)

3. Activation / Installation of lubrication system

Turn switch to set discharge period

Note activation / exchange date on label

Remove plug